




- A. Power
- B. Control panel
- C. Power switch
- D. Thermostat knob
- E. Feet
- F. Casters
- G. Control panel

### Wall-mounting

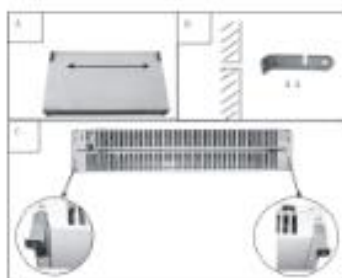

3

### TECHNICAL CHARACTERISTICS

Convector heater with thermostat  
 MAXIMUM POWER INPUT: 2500W  
 RATED VOLTAGE RANGE: AC220V-240V

**IMPORTANT** Read these instructions fully before using the heater. Retain these instructions for future reference.

#### ASSEMBLY OF THE HEATER

Before using the heater, the feet (supplied separately in the carton) must be fitted to the unit. These are to be attached to the base of the heater using the 2 wall-levelling screws provided. Taking care, ensure that they are located correctly in the bottom slots of the heater side moldings.

#### SAFETY INSTRUCTIONS (to be read before operating the heater)

- 1 Do not use the heater unless the feet are correctly attached if the heater is used as portable appliance.
- 2 Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
- 3 Keep the heater lead away from the hot body of the heater.
- 4 The heater is not intended for use in bathrooms, near any areas or similar water containers. Never place the heater where it may fall into a bathtub or other water container.
- 5 Do not use outdoors.
- 6 Do not cover or obstruct any of the heat output grilles or the air intake openings of the heater.
- 7 Do not place the heater on a surface having a very deep pile.
- 8 Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
- 9 Do not position the heater in front of, or immediately below, a wall socket.
- 10 Do not insert any object through the heat output or air intake grilles of the heater.
- 11 Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- 12 If a fault occurs it should be taken when the heater is plugged in areas occupied by children or invalids.
- 13 Always unplug the heater when leaving it from one location to another.
- 14 Do not use the heater if the power cord is damaged. If the power cord is damaged it must be replaced by a recognized service agent or other qualified person. If the plug is damaged, see the replacement details below.
- 15 Young children should be supervised to ensure that they do not play with the appliance. With the appliance in use it should be used by persons including children with reduced physical capacity or mental capabilities, or lack of experience and knowledge, unless they have been given appropriate instruction concerning use of the appliance by a person responsible for their safety.
- CAUTION: In order to avoid a hazard due to inrush current resulting of the thermal cut-out the appliance must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility.

#### OPERATION OF THE HEATER

**NOTE:** It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time for the heater may emit some noise and fumes. This will disappear when the heater has been on a short while.

4



## CONVECTORS

## USER INSTRUCTIONS



MODEL: CH2000  
CH2000TF



#### Convector heater with thermostat CH2000

Choose a suitable location for the heater, taking into account the safety instructions above. Insert the plug of the heater into a suitable socket. Turn the thermostat knob fully in a clockwise direction to the maximum setting. Turn on the heating elements by means of the rocker switches on the top panel. When the heating elements are on, the switches will illuminate. For maximum heat output both switches should be on. When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this the heater will heat the air temperature in the room to the set temperature by switching on and off automatically.

#### Operation for turbo fan

All the above instructions for Model CH2000 is also suitable for model CH2000TF with turbo. Model CH2000TF with turbo incorporates an internal fan, which can be switched on independently of the heating elements. For operation, push the switch with the fan symbol along side the fan to operate with the thermostat "on" position and can be used when the heating elements are "on" to blow the warm air to the room. In warm conditions the fan can be used with the heating elements "off" to blow cold air to the room.

#### CLEANING THE HEATER

Always unplug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

#### STORING THE HEATER

When the heater is returned to long periods of time it should be protected from dust and stored in a clean dry place.

#### WALL-MOUNTING THE HEATER

Caution - There should be a distance of at least 80 mm between the lower part of the appliance and the floor. The feet must be removed before mounting the appliance on the wall.

- 1 Measure the distance between the two slots situated at the back of the appliance (see picture A).
- 2 Drill two holes at the same distance in the wall and insert a plug in each hole you just drilled. Place the brackets facing the holes as indicated on picture B and attach them in the position with the screws supplied.
- 3 Before attaching the appliance on the brackets, which the two other brackets underneath the appliance as indicated on picture C.
- 4 Attach the appliance on the wall. To do so, hold it in such way that the slots are facing the brackets. Insert the appliance halfway onto the brackets until the appliance can go down into the grooves of the brackets.
- 5 As soon as the appliance is positioned correctly, take a pencil and mark a dot in the hole of each bracket in order to mark the position.
- 6 Then take off the appliance by proceeding the other way around, compared to point 4 above.
- 7 Drill a hole in the wall on each dot you just marked and insert a plug in each hole.
- 8 Attach the appliance back on the wall as indicated in point 4, insert screws through the brackets underneath the appliance and tighten without forcing.

5